


Panasonic®

Quick Menu Guide

Air-to-Water Hydromodule + Tank

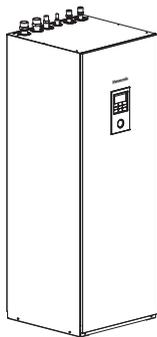

Model No.

Indoor Unit
WH-ADC0309J3E5ANC

Outdoor Unit
WH-UD03JE5*
WH-UD05JE5*
WH-UD07JE5*
WH-UD09JE5*



Quick Menu Guide

Air-to-Water Hydromodule + Tank

Installation Instructions attached.

Serial number and production year please refer to name plate.

2-7 **English**

Hurtig menuvejledning

Luft-til-vand hydromodul + Tank

Installationsvejledning vedhæftet.

For serienummer og produktionsår henvises der til typeskiltet.

8-13 **Dansk**



Manufactured by:
Panasonic AVC Networks Czech, s.r.o.
U Panasoniku 1, 320 84 Plzeň, Czech Republic



ACXF55-28320


Before Use

This Quick Guide explains how to use the Quick Menu.


Please read the Operating Instructions thoroughly before using the Quick Menu.

How to use the Quick Menu

After the initial settings have been completed, you can select a quick menu from the following options and edit the setting.

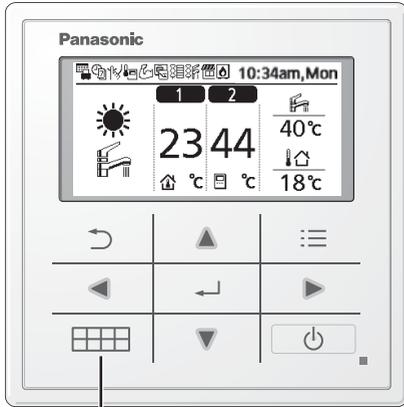

① Press  .

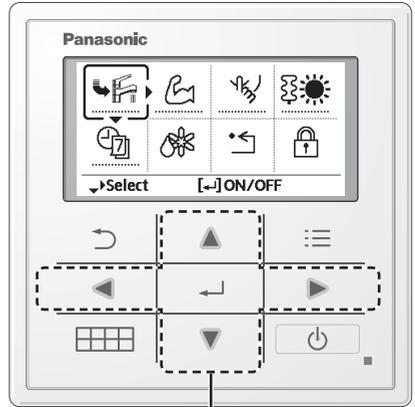

② Use     to select menu.

③ Press  to turn on/off the select menu.

Quick Menu



Force DHW



Powerful



Quiet



Force Heater



Weekly Timer



Force Defrost



Error Reset



R/C Lock

 Select

 ON/OFF

Select each setting and confirm the setting according to the instructions displayed at the bottom of the screen. (The icons refer to each selection key.)

To return to the Main Screen,

Press  or  .

How to use the Quick Menu

Notes on operation icon


Example:



• Operation icon indicate with “.....” = OFF




• Operation icon indicate with “———” = ON

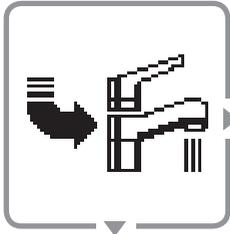


Force DHW

Select this icon to turn the Tank DHW on or off.

 Press to confirm your selection.




• Force DHW is turned off.

 

• Force DHW is turned on.

■ Note:

- Force DHW is disabled when Force Heater is turned on.
- When Force DHW is turned off, operation & mode should change back to the previous memorized status.

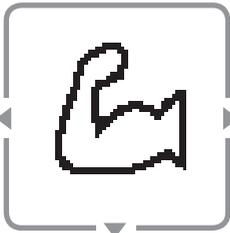

Powerful

Select this icon to operate the heating/cooling system powerfully.

Press to confirm your selection.

(The powerful operation starts approximately 1 minute after is pressed.)



• Powerful mode is set off.



• The Powerful mode operates for 30 minutes.



• The Powerful mode operates for 60 minutes.




• The Powerful mode operates for 90 minutes.

■ Note:

- Powerful is disabled when operation is turned OFF.

How to use the Quick Menu

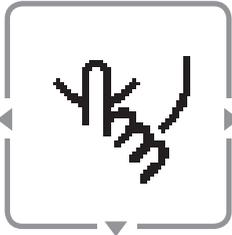


Quiet

Select this icon to operate quietly.

Press to confirm your selection.

(The quiet operation starts approximately 1 minute after is pressed.)

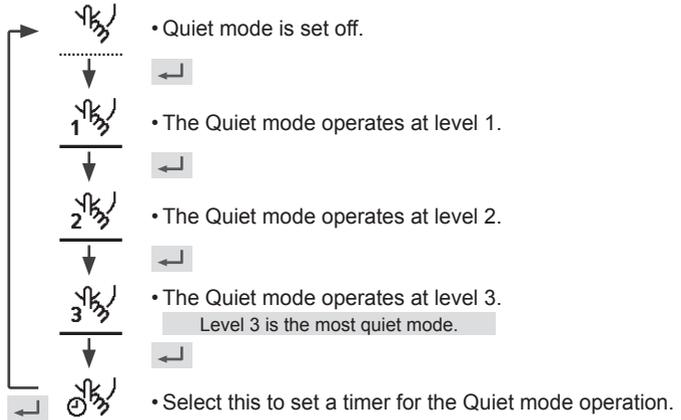

↓ After 1 sec delay.

Do you want to edit Quiet timer pattern?

Yes No

Pattern	Time	Level
1	6:00 am	2
2	8:00 pm	1
3	10:00 pm	0

Edit
Delete

12:00 pm

Set time is overlapped!

Close

Select "Yes".

- Select "Yes" using buttons.

Select pattern "1" ~ "6".

Select "Edit".


- If you select "Delete", the timer setting of the selected pattern will be deleted.

Set the hour and minutes.

Select the level of Quiet.

Note:

- If the time overlaps with another pattern, "Set time is overlapped!" will appear on the screen.

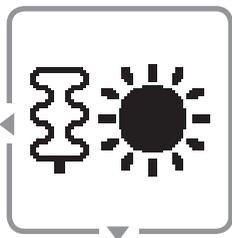


Force Heater

Select to force the Heater on.

Press  to confirm your selection.

(The Force Heater mode starts approximately 1 minute after  is pressed.)

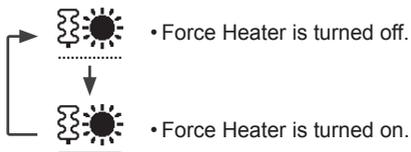


■ Note:

- Force Heater is disabled whenever operation is already on and “Disabled due to operation ON!” will be displayed.

Disabled due to
operation ON!

 Close

How to use the Quick Menu

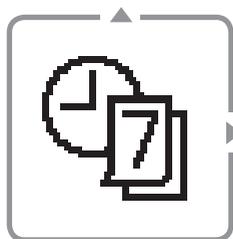

Weekly Timer

Select this icon to delete (cancel) or change the pre-set Weekly Timer.

Press to confirm your selection.

• Timer is not ON.

• Timer is set.

↓ After 1 sec delay.

Do you want to edit Weekly timer pattern?

Yes No

Select "Yes".

• If you select "No", the screen will return to the Main Screen.

Timer setup
Timer copy

• Timer setup: Select Timer setup to edit the Weekly Timer.

• Timer copy: Select to copy a timer setting.

Sun	Mon	Tue	Wed	Thu	Fri	Sat
-	✓	✓	✓	✓	✓	-

[Example of a Timer setup]

Select the day(s) which you wish to edit using ▲ ▼ buttons.

All 6 patterns are not set!
Do you want to edit?

Yes No

If all 6 patterns are not preset, this screen will be displayed.

Sun Mon Tue Wed Thu Fri Sat

1. 12:00am ON	☀️	👉	25/20°C	40°C
2. 2:00am ON	☀️	👉	25/25°C	40°C
3. 4:00am ON	☀️	👉	30/20°C	40°C

① ② ③ ④ ⑤ ⑥

① Select pattern "1" ~ "6".

② Set the hour and minutes of the Timer.

③ Select ON/OFF of the Timer.

④ Select the operation mode.



• Select mode using ▲ ▼ buttons.


⑤ Set the temperature for both Zone 1 and 2 (if your system has the 2-Zone setting).

Saturday: Pattern 1: Set Temp			
Zone1	☀️	Zone2	👉
ON	25°C	ON	25°C 45°C

⑥ Set the Tank temperature.

■ Note:


- Timer is disabled when Force Heater is turned on or Heat-Cool SW is enabled.
- If you have preset the Weekly Timer on 2 zones, you must repeat the same procedure with Zone 2.

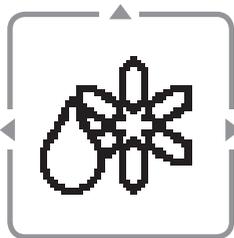


Select to defrost the frozen pipes.

Press **↵** to confirm your selection.

 (When the mode is accepted, below screen will be displayed.)




Force Defrost

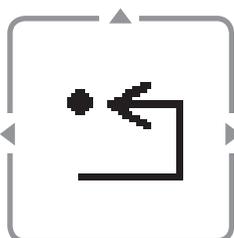

Select to restore the previous settings when error has occurred.


Press **↵** to confirm your selection.

 (When the mode has been accepted, below screen will be displayed.)



- Make sure all units are turned off before selecting this mode which restores the whole system to the previous settings.


Error Reset

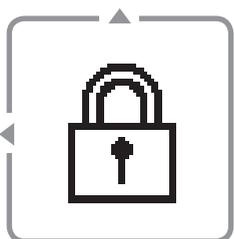

Select to lock the Remote Controller.

Press **↵** to confirm your selection.

 (When the mode has been accepted, below screen will be displayed.)



Select "Yes".

(The Main Screen will be locked.)

- If "No" is selected, the screen will return to the Main Screen.

R/C Lock

To unlock the Remote Controller

Press any key.

(When the mode has been accepted, below screen will be displayed.)



Enter any 4 digits of number (if the number is correct, the screen will be unlocked).

To reset forgotten password (under operation OFF screen)

Press **↶**, **↵** and **▶** continuously for 5 seconds.

(When the mode has been accepted, below screen will be displayed.)



Select "Reset".

- 1.Password is reset to 0000
- 2.Remote control is unlocked


(The screen will be off after 3 seconds.)

Før brug


Denne hurtige vejledning forklarer, hvordan hurtigmenuen skal bruges. Du bedes læse betjeningvejledningen grundigt, før du bruger hurtigmenuen.

Sådan bruger du hurtigmenuen

Når de indledende indstillinger er gennemført, kan du vælge en hurtigmenu fra følgende indstillinger, og redigere indstillingen.

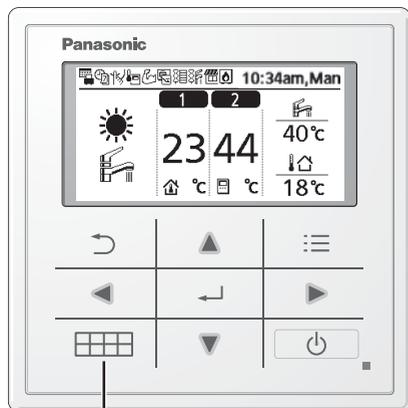

① Tryk på  .

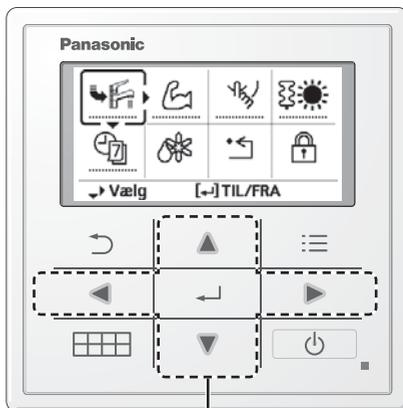

② Brug     til at vælge menuen.

③ Tryk på  for at tænde/slukke for den valgte menu.

Hurtig menu



Tving DHW



Powerful



Lydsvag



Start el backup



Ugeprogram



Kraftig optøning



Nulstilling af fejl



R/C-lås

 Vælg

 TIL/FRA

Vælg hver indstilling og bekræft indstillingen i henhold til de instruktioner, der vises nederst på skærmen. (Ikonerne henviser til hver valgtast.)

Sådan vender du tilbage til hovedskærmen,

Tryk på  eller  .

Sådan bruger du hurtigmenuen

Noter om betjeningsikon


Eksempel:



• Betjeningsikon indikeres med “.....” = FRA



• Betjeningsikon indikeres med “———” = TIL

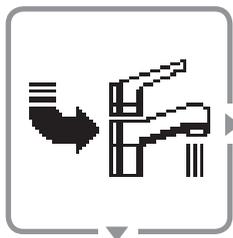

Tving DHW

Vælg dette ikon for at tænde eller slukke tankens varme brugsvand.

Tryk på  for at bekræfte dit valg.




• Kraftigt varmt brugsvand er slukket.



• Kraftigt varmt brugsvand er tændt.

■ Bemærk:

- Kraftigt varmt brugsvand er deaktiveret når det kraftige varmelegeme er tændt.
- Når det kraftige varme brugsvand er slukket, bør funktionen & tilstanden skifte tilbage til den forrige gemte status.

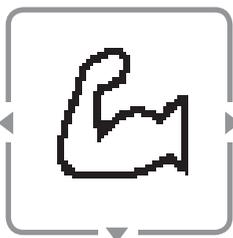

Powerful

Vælg dette ikon for at køre varme/kølesystemet kraftigt.

Tryk på  for at bekræfte dit valg.

(Den kraftige drift starter ca. 1 minut efter der er trykket på  .)



• Den kraftige tilstand er slukket.



• Den kraftige tilstand fungerer i 30 minutter.



• Den kraftige tilstand fungerer i 60 minutter.




• Den kraftige tilstand fungerer i 90 minutter.

■ Bemærk:

- Kraftig bliver deaktiveret når funktionen er slukket

Sådan bruger du hurtigmenuen

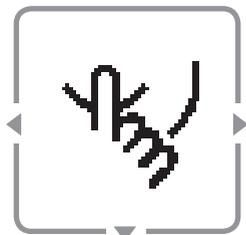


Lydsvag

Vælg dette ikon for at stille drift.

Tryk på for at bekræfte dit valg.

(Den stille drift starter cirka 1 minut efter der er trykket på .)

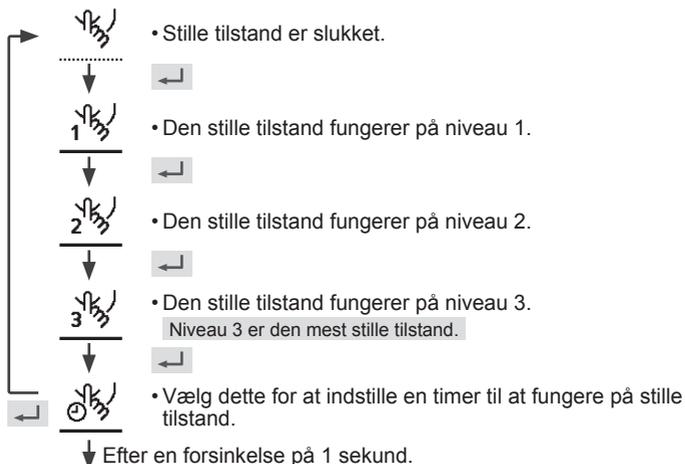

Vil du ændre lydsvag driftsprogram?

JA **NEJ**

Vælg "JA".

• Vælg "JA" ved at bruge .

Progr.	Tid	Niv.
1	6:00 am	2
2	8:00 pm	1
3	10:00 pm	0

Vælg mønster "1" ~ "6".

Ændre

Slet

Vælg "Ændre".

• Hvis du vælger "Slet", vil timeren indstilling for det valgte mønster blive slettet.

12:00 pm

Indstil timen og minutter.

1


Vælg niveauet for stille.

Tiden overlapper med andet program!

Luk

■ **Bemærk:**

• Hvis tiden overlapper med et andet mønster, vises "Tiden overlapper med andet program!" på skærmen.

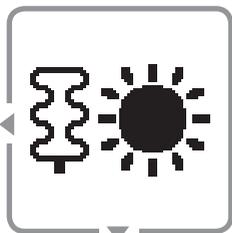

Start el backup

 
Vælg for at tvinge varmelegemets til at tænde.

Tryk på  for at bekræfte dit valg.

(Tilstanden kraftigt varmelegeme starter cirka 1 minut efter der er trykket på .



• Kraftigt varmelegeme er slukket.



• Kraftigt varmelegeme er tændt.


■ Bemærk:

- Force-varmer er deaktiveret når driften allerede er i gang og "Deaktiveret grundet drift TIL!" vil blive vist.

Ikke mulig fordi at
varmepumpe er i drift!

 Luk

Sådan bruger du hurtigmenuen

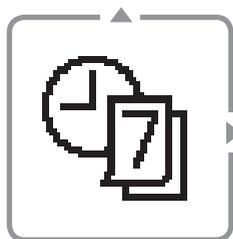

Ugeprogram

Vælg dette ikon for at slette (annullere) eller ændre den forudindstillede ugentlige timer.

Tryk på for at bekræfte dit valg.

• Timeren er ikke tændt.

• Timeren er indstillet.

Efter en forsinkelse på 1 sekund.

Vil du ændre ugeprogram?

JA NEJ

Vælg "JA".

• Hvis du vælger "NEJ", vender skærmen tilbage til hovedskærmen.

Program setup
Kopier program

• Program setup: Vælg opsætning af timer for at redigere den ugentlige timer.
• Kopier program: Vælg at kopiere en timer-indstilling.

Søn	Man	Tirs	Ons	Tors	Fre	Lør
-	✓	✓	✓	✓	✓	-

[Eksempel på en timer-opsætning]

Vælg den/de dag (e), du ønsker at redigere ved hjælp af -knappe.

Alle 6 programmer
er ikke aktive!
Vil du ændre?

JA NEJ

Hvis alle 6 mønstre ikke er forudindstillet, vil dette skærbillede blive vist.

Søn	Man	Tirs	Ons	Tors	Fre	Lør
1. 12:00am TIL			25/20°C			40°C
2. 2:00am TIL			25/25°C			40°C
3. 4:00am TIL			30/20°C			40°C
①	②	③	④	⑤		⑥

① Vælg mønster "1" ~ "6".

② Indstil timerens time og minutter.

③ Vælg tændt/slukket for timeren.

④ Vælg driftstilstanden.



• Vælg tilstand ved hjælp af -knappe.

⑤ Indstil temperaturen for både zone 1 og 2 (hvis dit system har en indstilling med 2 zoner).


Lørdag: Progr. 1: Temp.

Zone1	TIL	25°C	Zone2	TIL	25°C	45°C
-------	-----	------	-------	-----	------	------

⑥ Indstil tankens temperatur.

■ Bemærk:

- Timeren er deaktiveret, når det kraftige varmelegeme tændes eller Varme-Køle SW er aktiveret.
- Hvis du har forudindstillet den ugentlige timer på 2 zoner, skal du gentage den samme procedure med zone 2.

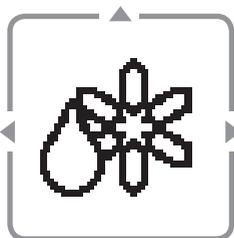


Vælg at afrime de frosne rør.

Tryk på for at bekræfte dit valg.

(Når tilstanden er blevet accepteret, vil skærmen nedenfor blive vist.)



Kraftig optøning

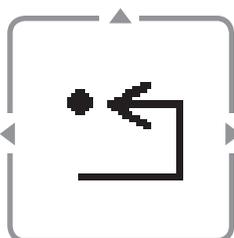

Vælg for at gendanne de tidligere indstillinger, når der er opstået en fejl.


Tryk på for at bekræfte dit valg.

(Når tilstanden er blevet accepteret, vil skærmen nedenfor blive vist.)



- Sørg for, at alle enheder er slukket, før du vælger denne tilstand, som genskaber hele systemet til de tidligere indstillinger.


Nulstilling af fejl

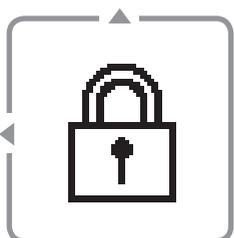

Vælg at låse fjernbetjeningen.

Tryk på for at bekræfte dit valg.

 (Når tilstanden er blevet accepteret, vil skærmen nedenfor blive vist.)



Vælg "JA".
(Hovedskærmen bliver låst.)

- Hvis "NEJ" er valgt, vil skærmen vende tilbage til hovedskærmen.

R/C-lås

Sådan låses fjernbetjeningen op

Tryk på en vilkårlig tast.

(Når tilstanden er blevet accepteret, vil skærmen nedenfor blive vist.)



Indtast 4 cifre (hvis nummeret er korrekt, og skærmen bliver låst op).

 
For at nulstille glemt adgangskode (under drift OFF-skærm)

Tryk på , og dernæst i 5 sekunder.

(Når tilstanden er blevet accepteret, vil skærmen nedenfor blive vist.)



Vælg "Reset".



(Skærmen slukker efter 3 sekunder).

Memo

Memo

Country	Hotline Phone Number
Austria	0800 - 700666
Baltic	+46 8 680 26 50
Bulgaria	+359 2 971 29 69
Croatia	+36 1 382 60 60
Czech Republic	+420 236 032 511
Denmark	+45 369 277 99
Finland	+358 923 195 432
France	+33(0) 892 183 184
Germany	0800 - 2002223

Country	Hotline Phone Number
Hungary	+36 1 382 60 60
Netherlands	+31(0)736402538
Norway	+47 210 339 99
Poland	+48 22 29 53 727
Spain	+34 (0) 902 153 060
Sweden	+46 (0)8 566 426 88
Switzerland	0800 - 001074
UK/Ireland	+44 (0) 1344 853 393

Panasonic Corporation

Web site: <http://www.panasonic.com>

© Panasonic Corporation 2020

Printed in the Czech Republic

Authorised representative in EU
Panasonic Testing Centre
Panasonic Marketing Europe GmbH
Winsbergring 15, 22525 Hamburg, Germany

ACXF55-28320
SC0420-0