

ACXF60-42250

Panasonic**INSTALLATION INSTRUCTIONS OUTDOOR UNIT**

RATED CAPACITY	MODEL NAME	RATED CAPACITY	MODEL NAME
36	U-36PZH3E5	60	U-60PZH3E5
50	U-50PZH3E5		

CAUTION**R32****REFRIGERANT**

This Air Conditioner contains and operates with refrigerant R32. THIS PRODUCT MUST ONLY BE INSTALLED OR SERVICED BY QUALIFIED PERSONNEL. Refer to Commonwealth, State, Territory and local legislation, regulations, codes, installation & operating instructions, before the installation, maintenance and/or service of this product.

Refer to the indoor unit installation instruction manual for the indoor unit installation.

Note: Ensure to hand over this installation instruction manual to the person performing the installation and inform the customer to keep it properly stored.

Required tools for Installation Works

1 Phillips screw driver	5 Spanner	10 Measuring tape	14 Torque wrench	65 Nm (6.6 kgf/m)
2 Level gauge	6 Pipe cutter	11 Thermometer	18 Nm (1.8 kgf/m)	100 Nm (10.2 kgf/m)
3 Electric drill, hole core drill (ø70 mm)	7 Reamer	12 Megohmmeter	42 Nm (4.3 kgf/m)	15 Vacuum pump
4 Hexagonal wrench (4 mm)	8 Knife	13 Multimeter	55 Nm (5.6 kgf/m)	16 Gauge manifold
	9 Gas leak detector			

- Refer to the caution items listed in “4. REFRIGERANT INSTALLATION” for the installation of the refrigerant piping and maintain strict control concerning the prevention of mixing impurities (water and mineral oils such as Suniso oils) with R32.
- The indoor unit to be connected must be R32 compatible and be sure to check the catalogue, etc. for available models. The product may not operate properly if connected to other indoor units.
- Panasonic will not be responsible for any accident or damage due to improper installation in any way not described in the detailed manuals. Malfunction caused by incorrect installation is also not covered by product warranty.

SAFETY PRECAUTIONS

- Read the following “SAFETY PRECAUTIONS” carefully before installation.
- Electrical work must be installed by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the model to be installed.
- The caution items stated here must be followed because these important contents are related to safety. The meaning of each indication used is as below. Incorrect installation due to ignoring of the instruction will cause harm or damage, and the seriousness is classified by the following indications.

	This indication shows the possibility of causing death or serious injury.
	This indication shows the possibility of causing injury or damage to properties only.

The items to be classified by the symbols:

	Symbol with white background denotes item that is PROHIBITED.
	Symbol with dark background denotes item that must be carried out.

- Carry out test running to confirm that no abnormality occurs after the installation. Then, explain to use the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

	WARNING
	Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. Any unit method or using incompatible material may cause product damage, burst and serious injury.
	Do not install outdoor unit near handrail of veranda. When installing air-conditioner unit on veranda of a high rise building, child may climb up to outdoor unit and cross over the handrail causing an accident.
	Do not use unspecified cord, modified cord, joint cord or extension cord for power supply cord. Do not share the single outlet with other electrical appliances. Poor contact, poor insulation or over current will cause electrical shock or fire.
	Do not tie up the power supply cord into a bundle by hand. Abnormal temperature rise on power supply cord may happen.
	Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury.
	Do not sit or step on the unit, you may fall down accidentally.
	Keep plastic bag (packaging material) away from small children, it may cling to nose and mouth and prevent breathing.
	When installing or relocating air conditioner, do not let any substance other than the specified refrigerant, eg. air etc mix into refrigeration cycle (piping). Mixing of air etc. will cause abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
	Do not pierce or burn as the appliance is pressurized. Do not expose the appliance to heat, flame, sparks, or other sources of ignition. Else, it may explode and cause injury or death.
	Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury etc.
	<ul style="list-style-type: none"> For R32 model, use new piping, flare nut and tools which is specified for R32 refrigerant. Using of existing (R22) piping, flare nut and tools may cause abnormally high pressure in the refrigerant cycle (piping), and possibly result in explosion and injury. For R32 and R410A, the same flare nut on the outdoor unit side and pipe can be use. Since the working pressure for R32/R410A is higher than that of refrigerant R22 models, replacing conventional piping and flare nuts on the outdoor unit side are recommended.
	<ul style="list-style-type: none"> If reuse piping is unavoidable, refer to instruction REFRIGERANT INSTALLATION (IN CASE OF REUSING EXISTING REFRIGERANT PIPING). Thickness for copper pipes used with R32 must be meet the requirement. Refer to REFRIGERANT INSTALLATION piping thickness table. It is desirable that the amount of residual oil less than 40 mg/10 m.
	Engage authorized dealer or specialist for installation. If installation done by the user is incorrect, it will cause water leakage, electrical shock or fire.
	For refrigeration system work, install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire.
	Use the attached accessories parts and specified parts for installation. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.
	Install at a strong and firm location which is able to withstand weight of the set. If the strength is not enough or installation is not properly done, the set will drop and cause injury.
	For electrical work, follow the national regulation, legislation and this installation instructions. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in the electrical work, it will cause electrical shock or fire.
	Do not use joint cable for indoor / outdoor connection cable. Use the specified indoor/outdoor connection cable, refer to instruction Electrical Wiring and connect tightly for indoor/outdoor connection. Clamp the cable so that no external force will have impact on the terminal. If connection or fixing is not perfect, it will cause heat up or fire at the connection.
	Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause fire or electrical shock.
	This equipment is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD), with sensitivity of 30mA at 0.1 sec or less. Otherwise, it may cause electrical shock and fire in case of equipment breakdown or insulation breakdown.
	During installation, install the refrigerant piping properly before running the compressor. Operation of compressor without fixing refrigeration piping and valves at opened position will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
	During pump down operation, stop the compressor before removing the refrigeration piping. Removal of refrigeration piping while compressor is operating and valves are opened will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
	Tighten the flare nut with torque wrench according to specified method. If the flare nut is over-tightened, after a long period, the flare may break and cause refrigerant gas leakage.
	After completion of installation, confirm there is no leakage of refrigerant gas. It may generate toxic gas when the refrigerant contacts with fire.
	Ventilate if there is refrigerant gas leakage during operation. It may cause toxic gas when the refrigerant contacts with fire.
	Be aware that refrigerants may not contain an odour.
	This equipment must be properly earthed. Earth line must not be connected to gas pipe, water pipe, earth of lightning rod and telephone.
	Otherwise, it may cause electrical shock in case of equipment breakdown or insulation breakdown.

	CAUTION
	Do not install the unit in a place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.
	Prevent liquid or vapor from entering sumps or sewers since vapor is heavier than air and may form suffocating atmospheres.
	Do not overcharge the unit, refer to gas charge specification. Overcharge will cause over current and damage to compressor.
	Do not release refrigerant during piping work for installation, re-installation and during repairing refrigeration parts. Take care of the liquid refrigerant, it may cause frostbite.
	Do not install this appliance in a laundry room or other location where water may drip from the ceiling, etc.
	Do not touch the sharp aluminium fin, sharp parts may cause injury.
	Carry out drainage piping as mentioned in installation instructions. If drainage is not perfect, water may enter the room and damage the furniture.
	Select an installation location which is easy for maintenance.
	Incorrect installation, service or repair of this air conditioner may increase the risk of rupture and this may result in loss damage or injury and/or property.
	Power supply connection to the room air conditioner. Use power supply cord type designation 60245 IEC 57 or heavier cord.
	Connect the power supply cord of the air conditioner to a circuit breaker for the permanent connection. It must be a double pole switch with a minimum 3.0 mm contact gap. Power supply point should be in easily accessible place for power disconnection in case of emergency.
	Installation work. It may need two people to carry out the installation work.
	Keep any required ventilation openings clear of obstruction.

PRECAUTION FOR USING R32 REFRIGERANT

- The basic installation work procedures are the same as conventional refrigerant (R410A, R22) models. However, pay careful attention to the following points:

	WARNING
	The appliance shall be stored, installed and operated in a well ventilated room with indoor floor area larger than A_{min} (m ²) [refer to Check of Density Limit] and without any continuously operating ignition source. Keep away from open flames, any operating gas appliances or any operating electric heater. Else, it may explode and cause injury or death.
	The mixing of different refrigerants within a system is prohibited. Models that use refrigerant R32 and R410A have a different charging port thread diameter to prevent erroneous charging with refrigerant R22 and for safety. Therefore, check beforehand. [The charging port thread diameter for R32 and R410A is 12.7 mm (1/2 inch).]
	Ensure that foreign matter (oil, water, etc.) does not enter the piping. Also, when storing the piping, securely seal the opening by pinching, taping, etc. (Handling of R32 is similar to R410A.)
	Operation, maintenance, repairing and refrigerant recovery should be carried out by trained and certified personnel in the use of flammable refrigerants and as recommended by the manufacturer. Any personnel conducting an operation, servicing or maintenance on a system or associated parts of the equipment should be trained and certified.
	Any part of refrigerating circuit (evaporators, air coolers, AHU, condensers or liquid receivers) or piping should not be located in the proximity of heat sources, open flames, operating gas appliance or an operating electric heater.
	The user/owner or their authorized representative shall regularly check the alarms, mechanical ventilation and detectors, at least once a year, where as required by national regulations, to ensure their correct functioning.
	A logbook shall be maintained. The results of these checks shall be recorded in the logbook.
	In case of ventilations in occupied spaces shall be checked to confirm no obstruction.
	Before a new refrigerating system is put into service, the person responsible for placing the system in operation should ensure that trained and certified operating personnel are instructed on the basis of the instruction manual about the construction, supervision, operation and maintenance of the refrigerating system, as well as the safety measures to be observed, and the properties and handling of the refrigerant used.
	The general requirement of trained and certified personnel are indicated as below: <ol style="list-style-type: none"> Knowledge of legislation, regulations and standards relating to flammable refrigerants; and, Detailed knowledge of and skills in handling flammable refrigerants, personal protective equipment, refrigerant leakage prevention, handling of cylinders, charging, leak detection, recovery and disposal; and, Able to understand and to apply in practice the requirements in the national legislation, regulations and Standards; and, Continuously undergo regular and further training to maintain this expertise.
	Air-conditioner piping in the occupied space shall be installed in such a way to protect against accidental damage in operation and service.
	Precautions shall be taken to avoid excessive vibration or pulsation to refrigerating piping.
	Ensure protection devices, refrigerating piping and fittings are well protected against adverse environmental effects (such as the danger of water collecting and freezing in relief pipes or the accumulation of dirt and debris).
	Expansion and contraction of long runs piping in refrigerating systems shall be designed and installed securely (mounted and guarded) to minimize the likelihood hydraulic shock damaging the system.
	Protect the refrigerating system from accidental rupture due to moving furniture or reconstruction activities.
	To ensure no leaking, field-made refrigerant joints indoors shall be tightness tested. The test method shall have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0,25 times the maximum allowable pressure (>1.04MPa, max 4.15MPa). No leak shall be detected.
	CAUTION
	<ol style="list-style-type: none"> General <ul style="list-style-type: none"> Must ensure the installation of pipe-work shall be kept to a minimum. Avoid use dented pipe and do not allow acute bending. Must ensure that pipe-work shall be protected from physical damage. Must comply with national gas regulations, state municipal rules and legislation. Notify relevant authorities in accordance with all applicable regulations. Must ensure mechanical connections be accessible for maintenance purposes. In cases that require mechanical ventilation, ventilation openings shall be kept clear of obstruction. When disposal of the product, do follow to the precautions in #11 and comply with national regulations. In case of field charge, the effect on refrigerant charge caused by the different pipe length has to be quantified, measured and labelled. Always contact to local municipal offices for proper handling. Ensure the actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed. Ensure refrigerant charge not to leak. Wear appropriate protective equipment, including respiratory protection, as conditions warrant. Keep all sources of ignition and hot metal surfaces away.
	<ol style="list-style-type: none"> 2. Servicing <ol style="list-style-type: none"> 2-1. Qualification of workers <ul style="list-style-type: none"> Any qualified person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification. Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants. Servicing shall be performed only as recommended by the manufacturer. The system is inspected, regularly supervised and maintained by a trained and certified service personnel who is employed by the person user or party responsible.
	<ol style="list-style-type: none"> 2-2. Checks to the area <ul style="list-style-type: none"> Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised. For repair to the refrigerating system, the precautions in #2-3 to #2-7 must be followed before conducting work on the system.
	<ol style="list-style-type: none"> 2-3. Work procedure <ul style="list-style-type: none"> Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being present while the work is being performed.

	<ol style="list-style-type: none"> 2-4. General work area <ul style="list-style-type: none"> All maintenance staff and others working in the local area shall be instructed and supervised on the nature of work being carried out. Avoid working in confined spaces. Always ensure away from source, at least 2 meter of safety distance, or zoning of free space area of at least 2 meter in radius.
	<ol style="list-style-type: none"> 2-5. Checking for presence of refrigerant <ul style="list-style-type: none"> The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. non sparking, adequately sealed or intrinsically safe. In case of leakage/spillage happened, immediately ventilate area and stay upwind and away from spill/ release. In case of leakage/spillage happened, do notify persons down wind of the leaking/spill, isolate immediate hazard area and keep unauthorized personnel out.
	<ol style="list-style-type: none"> 2-6. Presence of fire extinguisher <ul style="list-style-type: none"> If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available at hand. Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.
	<ol style="list-style-type: none"> 2-7. No ignition sources <ul style="list-style-type: none"> No person carrying out work in relation to a refrigerating system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. He/She must not be smoking when carrying out such work. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. “No Smoking” signs shall be displayed.
	<ol style="list-style-type: none"> 2-8. Ventilated area <ul style="list-style-type: none"> Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably exit it externally into the atmosphere.
	<ol style="list-style-type: none"> 2-9. Checks to the refrigerating equipment <ul style="list-style-type: none"> Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer’s maintenance and service guidelines shall be followed. If in doubt consult the manufacturer’s technical department for assistance. The following checks shall be applied to installations using flammable refrigerants. <ul style="list-style-type: none"> The actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed. The ventilation machinery and outlets are operating adequately and are not obstructed. If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant. Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected. Refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are properly protected against being so corroded.
	<ol style="list-style-type: none"> 2-10. Checks to electrical devices <ul style="list-style-type: none"> Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. Initial safety checks shall include but not limit to- <ul style="list-style-type: none"> That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking. That there is no live electrical components and wiring are exposed while charging, recovering or purging the system. That there is continuity of earth bonding. At all times the manufacturer’s maintenance and service guidelines shall be followed. If in doubt consult the manufacturer’s technical department for assistance. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. The owner of the equipment must be informed or reported so all parties are advised thereafter.
	<ol style="list-style-type: none"> 3. Repairs to sealed components <ul style="list-style-type: none"> During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation. Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc. Ensure that apparatus is mounted securely. Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer’s specifications.
	<ol style="list-style-type: none"> 4. Repair to intrinsically safe components <ul style="list-style-type: none"> Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use. Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating. Replace components only with parts specified by the manufacturer. Unspecified parts by manufacturer may result ignition of refrigerant in the atmosphere from a leak.
	<ol style="list-style-type: none"> 5. Cabling <ul style="list-style-type: none"> Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.
	<ol style="list-style-type: none"> 6. Detection of flammable refrigerants <ul style="list-style-type: none"> Under no circumstances shall potential sources of ignition be used in the searching or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used. The following leak detection methods are deemed acceptable for all refrigerant systems. <ul style="list-style-type: none"> No leaks shall be detected when using detection equipment with a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0,25 times the maximum allowable pressure (>1.04MPa, max 4.15MPa) for example, a universal sniffer. Electronic leak detectors may be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed. Leak detection fluids are also suitable for use with most refrigerants, for example, bubble method and fluorescent method agents. The use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work. If a leak is suspected, all naked flames shall be removed/extinguished. If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. The precautions in #7 must be followed to remove the refrigerant.

	<ol style="list-style-type: none"> 7. Removal and evacuation <ul style="list-style-type: none"> When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to: <ul style="list-style-type: none"> remove refrigerant -> • purge the circuit with inert gas -> • evacuate -> • purge with inert gas -> • open the circuit by cutting or brazing The refrigerant charge shall be recovered into the correct recovery cylinders. The system shall be purged with OFN to render the appliance safe. (remark: OFN = oxygen free nitrogen, type of inert gas) This process may need to be repeated several times. Compressed air or oxygen shall not be used for this task. Purging shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipe work are to take place. Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and there is ventilation available.
	<ol style="list-style-type: none"> 8. Charging procedures <ul style="list-style-type: none"> In addition to conventional charging procedures, the following requirements shall be followed. <ul style="list-style-type: none"> Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them. Cylinders shall be kept in an appropriate position according to the instructions. Ensure that the refrigerating system is earthed prior to charging the system with refrigerant. Label the system when charging is complete (if not already). Extreme care shall be taken not to over fill the refrigerating system. Prior to recharging the system it shall be pressure tested with OFN (refer to #7). The system shall be leak tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site. Electrostatic charge may accumulate and create a hazardous condition when charging and discharging the refrigerant. To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.
	<ol style="list-style-type: none"> 9. Decommissioning <ul style="list-style-type: none"> Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its details. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant. It is essential that electrical power is available before the task is commenced. <ol style="list-style-type: none"> Before attempting the procedure ensure that: <ul style="list-style-type: none"> mechanical handling equipment is available, if required, for handling refrigerant cylinders; all personal protective equipment is available and being used correctly; the recovery process is supervised at all times by a competent person; recovery equipment and cylinders conform to the appropriate standards. Before attempting the procedure ensure that: <ol style="list-style-type: none"> mechanical handling equipment is available, if required, for handling refrigerant cylinders; all personal protective equipment is available and being used correctly; the recovery process is supervised at all times by a competent person; recovery equipment and cylinders conform to the appropriate standards. Pump down refrigerant system, if possible. If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system. <ol style="list-style-type: none"> Recovered refrigerant shall not be charged into another refrigerating system unless it has been cleaned and checked. Electrostatic charge may accumulate and create a hazardous condition when charging or discharging the refrigerant. To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.
	<ol style="list-style-type: none"> 10. Labelling <ul style="list-style-type: none"> Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.
	<ol style="list-style-type: none"> 11. Recovery <ul style="list-style-type: none"> When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely. When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order. Recovery cylinders are evacuated and, if possible, cooled before recovery occurs. The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt. The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged. Do not mix refrigerants in recovery units and especially not in cylinders. If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

Explanation of symbols displayed on the indoor unit or outdoor unit.

WARNING This symbol shows that this equipment uses a flammable refrigerant. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.

CAUTION This symbol shows that the Operating Instructions should be read carefully.

CAUTION This symbol shows that a service personnel should be handling this equipment with reference to the Technical Manual.

CAUTION This symbol shows that there is information included in the Operating Instructions and/or Installation Instructions.

Check of Density Limit
 The refrigerant (R32), which is used in the air conditioner, is a flammable refrigerant. So the requirements for installation space of appliance are determined according to the refrigerant charge amount (m) used in the appliance. The minimum indoor floor space compared with the amount of refrigerant is roughly as follows:

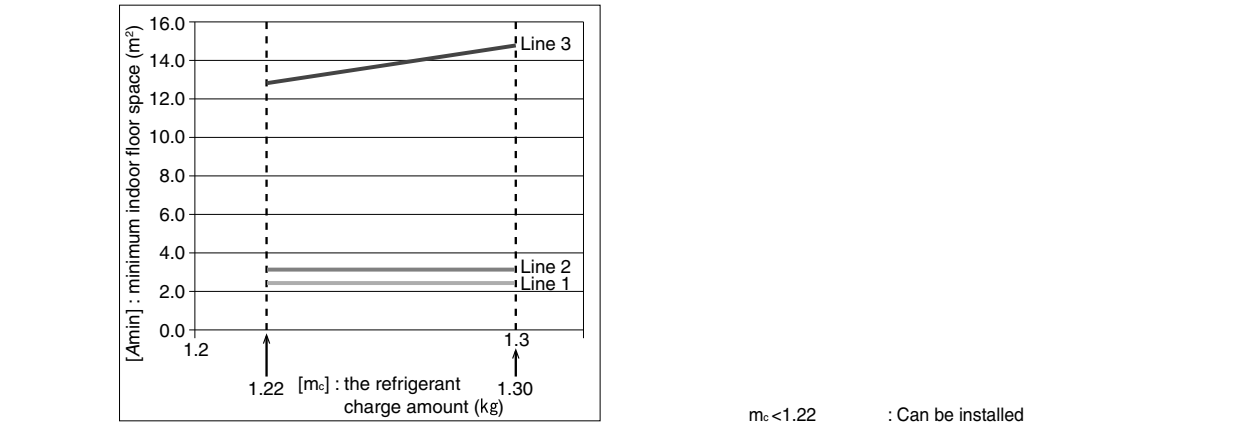


Table 1

Installation height of Indoor Unit: h _{in}	Indoor Unit Type	Density Limit Line
h _{in} ≥ 2.2 m	Low Silhouette Ducted Low Silhouette Ducted	Line 1
1.8 m ≤ h _{in} < 2.2 m	Low Silhouette Ducted Low Silhouette Ducted	Line 2
h _{in} < 1.8 m	Low Silhouette Ducted	Line 3

Table 2

m (kg)	U-36PZH3ES	U-50PZH3ES	U-60PZH3ES
1.28	1.28	1.28	1.28

m₁ ≤ 1.22 : Can be installed
 1.22 < m ≤ m_{max} : Can be installed above "Density Limit Line" 1
 m > m_{max} : Cannot be installed


m : The refrigerant charge amount (Total of refrigerant at shipment and refrigerant charge amount in the field).
 m₁ : Please calculate m₁ according to piping length in the field as shown in the calculation example below.
 m_{max} : Calculating example > Refer to table "Specification for pipe connecting indoor unit to outdoor unit."
 (conditions : U-60PZH3ES Total pipe length = 40 m)

① Refrigerant charged at shipment ② Refrigerant charge amount in the field ③ Additional charge per 1m
 ④ Total pipe length
 m₁ = m + ② + ③ × ④
 → If the total piping length is within the maximum value of the charge-less piping length, refrigerant charge in the field is unnecessary.
 m_{max} : The maximum refrigerant charge amount

1. Please install according to [Warning] [Caution] on page 1.

2. SELECT THE OUTDOOR UNIT INSTALLATION LOCATION

- Warning** Be careful when picking up and moving the indoor and outdoor units. Get a partner to help, and bend your knees when lifting to reduce strain on your back. Sharp edges or thin aluminum fins on the air conditioner can cut your fingers.
- Install the unit once you have checked that the installation location matches the following conditions.
 - A location with sufficient ventilation.
 - Possibly a location that is sheltered from rain or direct sunlight and is well-ventilated so that hot and cool air does not build up.
 - A location where the area around the discharge is not exposed to animals or plants which could adversely affect the release of hot or cool air from the unit.
 - A location where the discharge and operation noise will not be a nuisance to the neighbours.
 - A location that can support the product's weight or vibrations and secured for horizontal installation wherever possible.
 - A location that does not obstruct the air discharge or intake.
 - A location where there is no danger of flammable or corrosive gas leaks.
 - A location that provides space for installation and service.
 - A location that allows the pipe and cable length fixture for internal and external connections.
 - If many need two or more people to carry out the installation work.
 - Refer to the diagram below for the installation location which is exposed to strong wind.
 - If a strong wind of more than 5 m/sec blows to the area directly in front of the discharge, the outdoor unit's air flow is reduced and the outflow may re-enter (short circuit) causing the following outcome:
 - "Reduced capacity", "Increased frost formation during heating" or "Operation stopped due to increased pressure".
 - Should an exceptionally strong wind blow to the area directly in front of the discharge of the outdoor unit, there is the risk of damage due to the fan's high-speed reverse rotation.
 - If the direction of the prevailing wind is known when operating the unit, place the unit at an appropriate angle to the wind's direction so that the discharge faces towards a building or a wall.

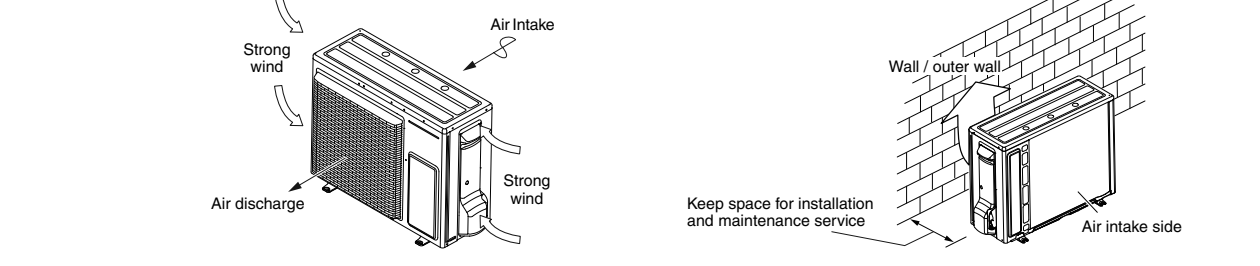

- If installing at locations prone to snowfall, install the unit as high as possible with suitable roofing which shelters the unit from snow.
- Avoid installing the unit in locations where there are petroleum products (such as machine oil), saline content (such as coastal areas), sulphurous gas and where high frequency noise is generated.
- Place the indoor and outdoor unit, power cords and connection cable between outdoor and indoor unit at a minimum distance of 1 meter or more away from televisions and radios. This is to avoid interference to picture and/or sound. (However, depending on the electromagnetic waves, noise interference may still occur even with the 1 meter separation.)
- For restaurants and kitchens, avoid installing at locations which draws oil and steam.
- Plastic parts can deteriorate from droplets of oil and steam or it can cause falling parts or water leakage.
- Avoid installing at the location where cutting oil mist or iron powder is present.
- If there is an immense voltage fluctuation due to the location's position, ensure to split the power supply.
- When installing the product in a place where it will be affected by typhoon or strong wind such as wind blowing between buildings, including the rooftop of a building and a place where there is no building in surroundings, fix the product with an overturn prevention wire, etc.
- Ensure to assign several people or use a mechanical lift, etc. to transport the unit.

2. SELECTING THE LOCATION FOR INSTALLATION SERVICE

Please secure necessary space to guarantee performance and service & maintenance. For multiple installations, please secure enough space to enable removal of side face screws between units. (unit:mm)

(A) When an obstruction is present on the air inlet side

When an obstruction is present also in the upward area

① One outdoor unit installed individually
 Obstruction only on air inlet side

② Two or more outdoor units installed side by side
 Obstructions on both sides

a	50 mm or more
b	50 mm or more
c	250 mm or more
d	500 mm or more

(B) Obstruction on both sides

a	50 mm or more
b	50 mm or more
c	250 mm or more
d	500 mm or more

When an obstruction is present also in the upward area

① One outdoor unit installed individually
 Obstruction only on air inlet side

② Two or more outdoor units installed side by side
 Obstruction also on the air inlet side and both sides

a	50 mm or more
b	50 mm or more
c	250 mm or more
d	500 mm or more
e	1,000 mm or more

(B) When an obstruction is present on the air outlet side

When the upward area is open

① One outdoor unit installed individually

② Two or more units installed side by side

a	500 mm or more
---	----------------

(B) When an obstruction is present on the air outlet side

When the upward area is closed

① One outdoor unit installed individually

② Two or more units installed side by side

a	1,000 mm or more
b	500 mm or more
c	250 mm or more

When an obstruction is present also in the upward area

① One outdoor unit installed individually

② Two or more units installed side by side

a	500 mm or more
b	500 mm or less
c	300 mm or more

(C) When an obstruction is present on both the air inlet and air outlet sides

Case 1: When an obstruction on the air outlet side is higher than the outdoor unit (L > H) (There is no height restriction on the air inlet side.)

When the upward area is open

① One outdoor unit installed individually

② Two or more units installed side by side

a	100 mm or more
b	500 mm or more

When an obstruction is present also in the upward area

① One outdoor unit installed individually

② Only two outdoor units installed side by side

a	200 mm or more
b	500 mm or less
c	1,000 mm or more

When an obstruction is present also in the upward area

① One outdoor unit installed individually

② Two or more units installed side by side

a	200 mm or more
b	500 mm or less
c	1,000 mm or more

When an obstruction is present also in the upward area

① One outdoor unit installed individually

② Two or more units installed side by side

a	100 mm or more
b	500 mm or more

When an obstruction is present also in the upward area

① One outdoor unit installed individually

② Two or more units installed side by side

a	500 mm or more
b	500 mm or less
c	1,000 mm or more

When an obstruction is present also in the upward area

① One outdoor unit installed individually

② Two or more outdoor units installed side by side

a	50 mm or more
b	150 mm or more
c	250 mm or more
d	500 mm or more

(D) When outdoor units are stacked

Only two outdoor units can be stacked. For drain treatment, a space of at least 400 mm is required between the upper and lower outdoor units. Close the area A (gap between the upper outdoor unit and lower outdoor unit) so that the outlet air does not bypass there.

① Obstruction on the air outlet side

② Obstruction on the air inlet side

a	500 mm or more
b	300 mm or more
c	1,000 mm or more
d	50 mm or more

(E) When outdoor units are installed in rows, such as on a rooftop (L < H)

① One outdoor unit installed in each row

② Two or more units installed side by side

a	500 mm or more
b	300 mm or more
c	1,000 mm or more
d	50 mm or more

(E) When outdoor units are installed in rows, such as on a rooftop (L < H)


① One outdoor unit installed in each row

② Two or more units installed side by side

a	1,000 mm or more
b	500 mm or more
c	2,000 mm or more
d	250 mm or more
e	250 mm or more
f	1,000 mm or more

The above mentioned distance is required for optimal unit performance. Allow as much space as possible in order to obtain the best performance from the units.

- 3. TRANSPORT AND INSTALL THE OUTDOOR UNIT**
- Transporting
 - Transport the outdoor unit in its original packaging as close as possible to the installation location.
 - In the event that the unit needs to be lifted or suspended, use a rope or belt and use cloth or wood as padding to avoid damaging the unit.
 - Installation
 - Read the "Select the outdoor unit installation location" thoroughly before installing the outdoor unit.
 - When installing to a concrete or solid surface, use M10 or a W 3/8 bolts and nuts to secure the unit. Ensure that it installed upright on a horizontal plane. (Use an anchor bolt for the installation as shown in the diagram below.)
 - Avoid installing on the slanted roof.
 - In the event where the roof is at risk of receiving oscillations or vibrations, secure the unit with a seismic isolating mount or vibration absorbing rubber.
 - The drain water will be discharged from the unit during heating or defrosting operation mode.
 - Select an appropriate location with good drainage system. (In the winter, there is risk of slipping due to freezing, and depending on the installation set up there is risk of drain water running overhead.)
 - Please consult us if installing drain elbows.
 - In cold regions (where the outdoor temperature can drop to below 0° for 2 to 3 consecutive days), the drain water may freeze and may prevent the fan from operating. For this case, do not use the drain elbow.

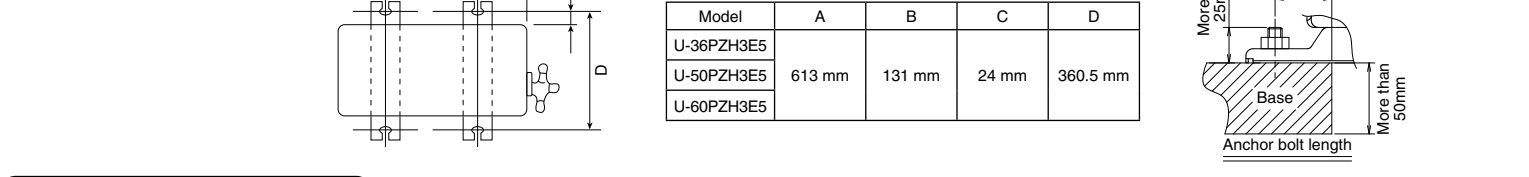


- 4. REFRIGERANT INSTALLATION**
- For indoor unit refrigerant piping installation, refer to the installation instruction manual that comes with that indoor unit.
- Precautions during refrigerant installation.
 - Use clean pipes with no dust inside.
 - The pipe may corrode with the presence of fluorine dust which will adversely affect the refrigerant piping system due to deterioration of the refrigerant oil, etc.
 - This unit is specifically for R32. Ensure to adhere to the following items and install accordingly:
 - Use pipe cutters and flaring tools which are specially designed for use with R32.
 - When connecting with flaring tools, coat the flare section with either-based oil.
 - Ensure to use flare nuts supplied with the unit when connecting this unit.
 - Only for slotted or for open pipes.
 - Set the lower limit of the allowable pipe length to 3m.
 - If the pipe is shorter than 3m, the refrigerant may become overfilled and a problem such as abnormal high pressure could occur.
 - Carefully handle the liquid refrigerant, as it may cause a frostbite.
 - Do not release refrigerants during the piping works for installing, re-installing and repairing refrigerant parts.

Specification for pipe connecting indoor unit to outdoor unit.

	U-36PZH3ES	U-50PZH3ES	U-60PZH3ES
Pipe outer diameter	Liquid (mm) / Gas (mm in.)	6.35 (1/4) / 12.7 (1/2)	6.35 (1/4) / 12.7 (1/2)
Maximum pipe length	(m)	40	30
Maximum elevation	(m)	15	15
Charge-less pipe length	(m)	3 - 30	15
Additional charge per 1 m	(g)	1.13	1.13
Refrigerant charged at shipment	(kg)	1.28	1.28
Total refrigerant amount	(kg)	1.28	1.28

Piping Thickness:
 Size (mm (in.)) : 6.35 (1/4) 9.52 (3/8) 12.7 (1/2) 15.88 (5/8)
 Thickness, mm : > 0.8 > 0.8 > 0.8 > 0.8 > 1.0

- Precautions when operating the 2/3-way valve for piping installation**
- Do not open the 2/3-way valve until the piping installation is completed.
 - If it is closed during shipment.
 - When removing or tightening the gas tube flare nut, use 2 adjustable wrenches together: one at the gas tube flare nut, and the other at part A.
 - Refer to the following table for the tightening torque of the 2/3-way valve flare nuts.
 - If the nuts are over tightened, they may cause the flares to break or leak.
 - Do not add additional force to the valve's cover.
 - Using spanners on the cover or valve itself (other than the hexagonal parts) may cause gas leakage.
 - Avoid using spanners on the cover or parts other than the hexagonal part of the valve.

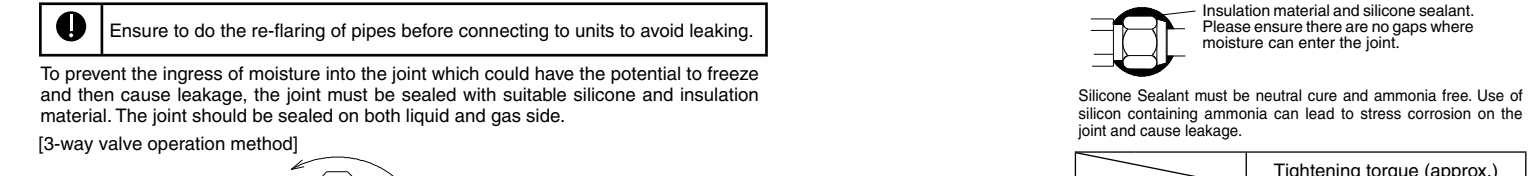

- Precautions for handling the valve cap**
- Ensure not to scratch the inner surface of the valve or the end of the valve shaft.
 - Once adjustments to the valve are completed, ensure to tighten the valve cap according to the prescribed torque.
- Precautions for handling the service ports**
- Use a push-rod with a charge hose.
 - Once adjustments to the valve are completed, ensure to tighten the valve cap according to the prescribed torque.

Precautions for connecting the pipes

- For proper connection, align the union and flare straight with each other.
- Ensure that the pipes do not come into contact with the compressor's bolts or exterior panel.
- There is a risk of condensation from the 3-way valve coming out between the insulation material and the indoor unit's piping when you install the outdoor unit above than the indoor unit. Ensure to caulk the connection parts.

Precautions for insulation installation | Maximum temperature limit of gas or liquid piping is 120 °C

- In high humidity environment, reinforce the insulation material for the refrigerant piping. Failure to do so may result in condensation on the surface of the insulation material.
- Use materials with good heat-resistant properties as the heat insulator for the pipes. Ensure to insulate both the gas side and liquid side pipes.
- If the pipes are not adequately insulated, condensation and water leakages may occur.
- Ensure that the curing agent covers the pipes up to the unit's connecting part.
- If the piping is exposed, it may cause condensation or burn (when touch the pipe).

Precautions for flare nut installation

Dimensions when adding flare nuts and the tightening torque

Piping size	Tightening torque (approx.)	Flare section dimensions A	Flare configuration
ø 6.35	18.0 Nm (180 kgfcm)	8.7 - 9.1 mm	
ø 9.52	42.0 Nm (420 kgfcm)	12.8 - 13.2 mm	
ø 12.7	55.0 Nm (550 kgfcm)	16.2 - 16.6 mm	
ø 15.88	65.0 Nm (650 kgfcm)	19.3 - 19.7 mm	

- After piping connection has completed, ensure there is no gas leakage.
- When tightening the flare nut, coat the flares (inner surface only) with refrigerant oil on the flares. Firstly, screw in 3-4 turns by hand.
 - Ensure not to get oil on the screw part.
 - Refrigerant oil used is either-based.
 - Once the piping connection is completed, perform leakage inspection using nitrogen gas.
 - When flared joints are reused, the flare part shall be re-flared.

- INCREASE OF REUSING EXISTING REFRIGERANT PIPING**
- Observe the followings to decide reusing the existing refrigerant piping.
- Poor refrigerant piping could result in product failure.
- In the circumstances listed below, do not reuse any refrigerant piping. Instead, make sure to install a new piping.
 - Heat insulation is not provided for either liquid-side or gas-side piping or both.
 - The existing refrigerant pipe has been left in an open condition.
 - The diameter and thickness of the existing refrigerant piping does not meet the requirement. (Refer to above tables)
 - The piping length and elevation does not meet the requirement. (Refer to above tables)
 - Use only R32 or R410A genuine branch pipe.
 - Perform proper pump down for opened product before reuse piping.
 - In the circumstances listed below, clean it thoroughly before reuse.
 - Pump down operation cannot be performed for the existing air conditioner.
 - The compressor has a failure history.
 - Oil color is darken. (ASTM 4.0 and above)
 - The existing air conditioner is gas/oil heat pump type.
 - Do not reuse the flare to prevent gas leak. Make sure to install a new flare.
 - If there is a welded part on the existing refrigerant piping, conduct a gas leak check on the welded part.
 - Replace deteriorated heat insulating material with a new one. Heat insulating material is required for both liquid-side and gas-side piping.

5. AIR TIGHTNESS TEST ON THE REFRIGERATING SYSTEM

- AIR PURGING METHOD IS PROHIBITED FOR R32 SYSTEM**
- Do not purge the air with refrigerants but use a vacuum pump to vacuum the installation.
 - There is no extra refrigerant in the outdoor unit for air purging.

Before system is charged with refrigerant and before the refrigerating system is put into operation, below site test procedure and acceptance criteria shall be verified by the certified technicians, and/or the installer.

Be sure to check whole system for gas leakage.

- Connect a charging hose with a push pin to the Low side of a charging set and the service port of the 3-way valve.
- Attach the gauge manifold set correctly and lightly. Make sure that both valves of the manifold gauge (low pressure and high pressure) is in close position.
- Connect the center hose of the manifold gauge to a vacuum pump.
- Turn on the power supply to the vacuum pump, then turn open the low side manifold gauge valve and make sure that the needle in the gauge moves from 0cmHg (0 MPa) to -76 cmHg (-0.1 MPa) or vacuum unit 500 microns is achieved. Then close the low side manifold gauge valve.
- Remove the vacuum pump from the centre hose and connect the centre hose to cylinder of any applicable inert gas as test gas.
- Charge test gas into the system and wait until the pressure within the system to reach mm. 1.04MPa (10.4bar).
- Wait and monitor the pressure reading on the gauges. Check if there is any pressure drop. Wasting time depends on the size of the system.
- If there is any pressure drop, perform step 9-12. If there is no pressure drop, perform step 13.
- Use Gas Leak Detector to check for leaks. Must use the detection equipment with a sensitivity of 5 grams per year of test gas or better.
- Move the probe along the air conditioning system to check for leaks, and mark for repair.
 - Any leak detected and marked shall be repaired.
 - After repair, repeat evacuation steps 3-4 and tightness test steps 5-7.
- Check the pressure drop as in step 8.
- If no leak, Recover the test gas. Perform evacuation of steps 3-4.
- Then proceed to step 14.
- Disconnect the charging hose from the service port of the 3-way valve.
- Tighten the service port caps of the 3-way valve at a torque of 18 Nm with a torque wrench.
- Remove the valve caps of both the 2-way valve and 3-way valve.
- Open both of the valves, using a hexagonal wrench (4mm). It is recommended to allow refrigerant slowly flow into the refrigerant system to prevent refrigerant freezing. Slightly open 2-way valve for a seconds then close the valve. Repeat this action for 3 cycles then fully open the valve.
- Mount back the valve caps onto the 2-way valve and the 3-way valve to complete this process

Notes:
 Recommended use of any of the following leak detector.
 I) Universal Sniffer leak detector
 II) Electronic halogen leak detector
 III) Ultrasonic Leak Detector

6. REGARDING REFRIGERANT FILLING

- Precautions during refrigerant filling**
- Use tools that are designed specifically for R32, for pressure resistance and to prevent mixing impurities.
 - Fill the refrigerant from the 3-way valve's service port on the liquid-side.
- For filling and replacing all refrigerant (For refilling due to a leak)
- For refilling refrigerant, first collect all residual refrigerant and after vacuum dehydration using the vacuum pump. Refill the refrigerant according to the prescribed amount stated on the placard affixed to this unit.
- Precautions after the pipes' connection have completed**
- Ensure to open the 3-way valve after completing the piping installation, leak test and vacuuming. If it is closed during operation, it can lead to compressor failure.

7. ELECTRICAL WIRING

This air conditioner must be installed in accordance with national wiring regulations. Cables connected to outdoor unit must be approved polychloroethylene sheathed type 60245 IEC 57 or H05RN-F/H07RN-F or heavier.


The units must be connected to the supply cables for fixed wiring by qualified technician. Circuit breaker must be incorporated in the fixed wiring in accordance with the national wiring regulations. The circuit breaker must be approved, suitable for the voltage and current ratings of equipment and have a contact separation by 3mm in all poles. When the supply cable is damaged, it must be replaced by qualified technician.

Be sure to install a current leakage breaker, main switch and fuse to the main power supply, otherwise electric shocks may result.


Be sure to connect the unit to secure earth connection. If the earthing work is not carried out properly, electric shocks may result.

Earth wire must be yellow/green (YG) in colour and longer than other AC wires for safety reason.

Wiring shall be connected securely by using specified cables and fix them securely so that external force of the cables may not transfer to the terminal connection section. Imperfect connection and fixing leads to fire, etc.

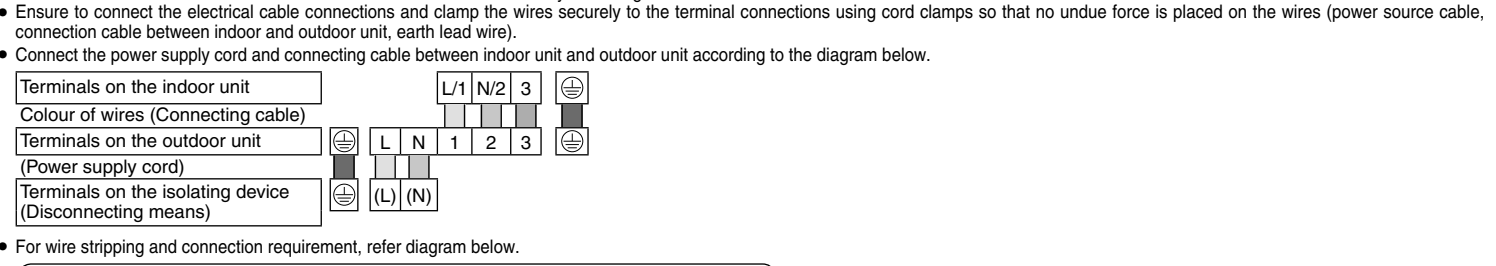

- For wire stripping and connection requirement, refer diagram below.
- DO NOT** install a phase advance capacitor for power factor improvement. (It does not improve the power factor and will cause abnormal overheating.)
- Do not bind the excess cables together and place them inside the unit.
 - Make sure that terminal board cover is closed correctly.
 - Use the appropriate screwdriver for tightening the terminal screws. Small sized screwdriver damages the head of the screw and cannot tighten it properly.
 - There is a risk of damaging the screw if the terminal screw is overtightened. Tighten with the appropriate torque 1.57Nm - 1.90Nm (16kgcm-20kgcm).

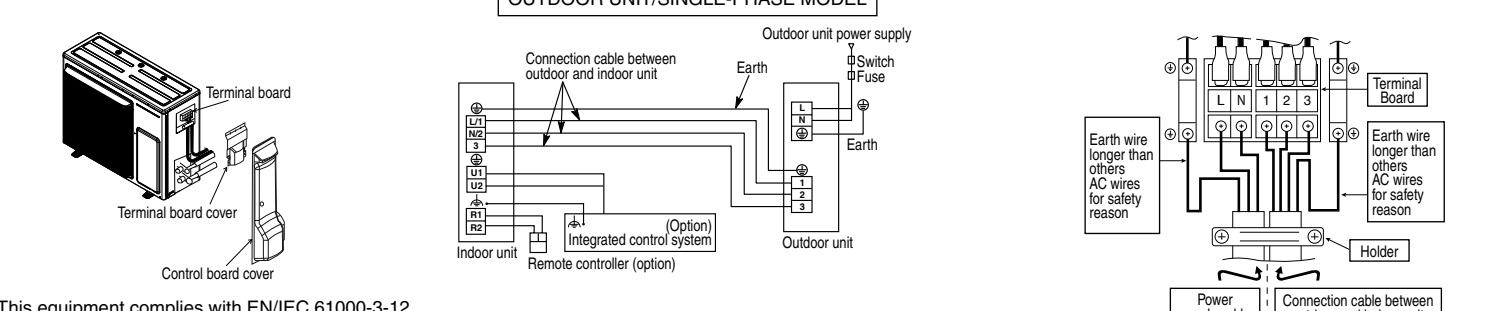

This equipment complies with EN/IEC 61000-3-12

Functional earthing (for the shielded cable)

Outdoor unit

Model	Power supply	Power supply cable				Time delay fuse capacity (A)
		Min. wire size (mm²)	Recommended Wire Length (m)	Max. length (m)	Wire size (mm²)	
U-36PZH3ES	220-230-240V	1.5	13	2.5	22	20
U-50PZH3ES	220-230-240V	1.5	12	2.5	20	20
U-60PZH3ES	220-230-240V	2.5	-	2.5	15	25

Control wiring

Type	Connection cable between outdoor and indoor unit	
	Outdoor unit	Max. length
min. 1.5 mm²	U-36 - 60PZH3ES	40 m

- Refer to the installation instruction manual provided with the indoor unit.
- The product meets the technical requirements of EN/IEC 61000-3-3.
- Decide the length and size of the power supply cable based on the maximum amperes tabulated above in accordance with the national wiring regulations.
- Recommended maximum length indicates the value calculated with the 2% voltage drop of the cable.
- Select the fuse(s) and/or circuit breaker(s) from the types and ratings suitable for the maximum ampere tabulated above in accordance with the national wiring regulations.
- An RCD suitable for use with inverters, resistant to high frequency noise, is most suitable. RCD's intended for protection to include high frequency currents are unnecessary and should be avoided, as potentially causing nuisance tripping in this application.
- If capacity of power supply circuit and enforcement are not enough, it can causes the electric shock and a fire.

WARNING RISK OF FIRE JOINING OF WIRES MAY CAUSE OVERHEATING AND FIRE.

Do not join wires.

8. PRECAUTIONS REGARDING TEST RUN

Check Before Test Run

Check Before Test Run	Content check
Outdoor unit	<ul style="list-style-type: none"> Check that the insulation resistant value is more than 1MΩ. Use the 500V mega-testers to measure the insulation. Check point : between power supply terminals (N) to earth. Do not use the mega-tester for any other circuit except for voltage of 220-230-240V-.

- Power supply cable**
- Is the wire set up and connected as described in the instructions? Check for any phase sequence.
 - Are the wire connection's screws loose?
 - Is the open and close device / leakage breaker installed?
 - Is the power supply cable's thickness/length appropriately measured as described in the instructions?
 - Is it earthed (grounded)?
 - Are the wire connections for the indoor/outdoor units connected as described in the instructions?
 - Are